


Diverter installation

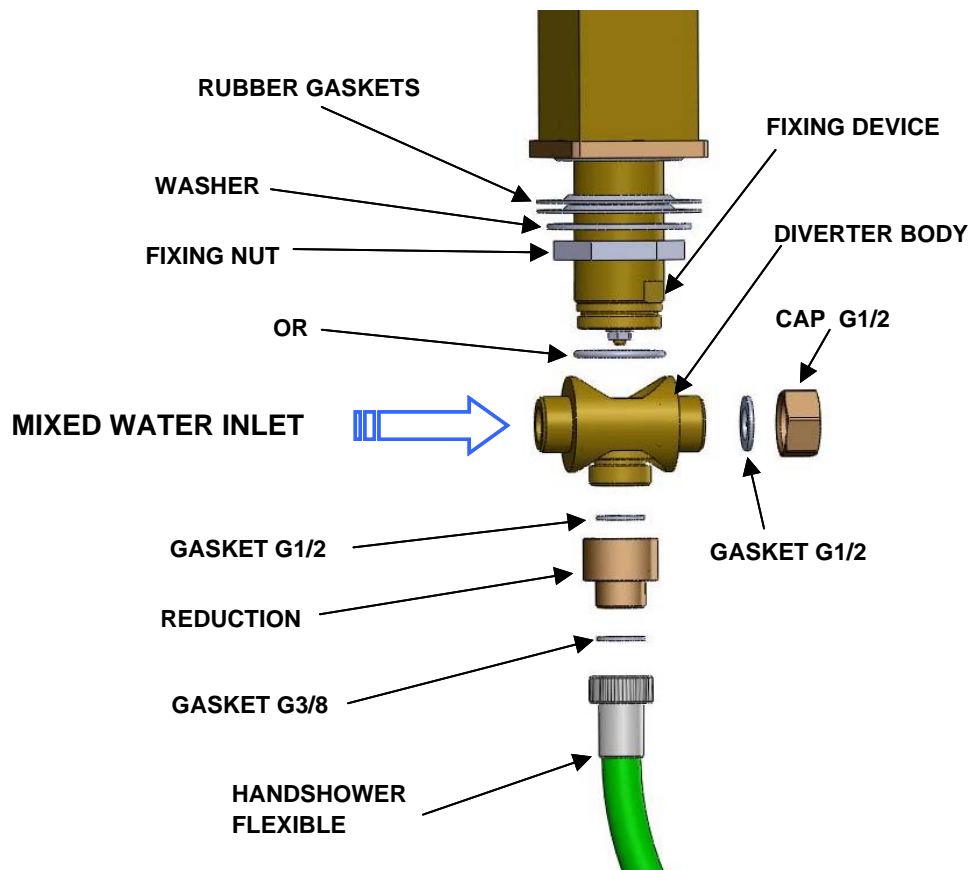

- 1) Unscrew the **DIVERTER BODY** from the **FIXING DEVICE**
- 2) Remove the **OR** from the **FIXING DEVICE**
- 3) Put the **FIXING DEVICE** inside the fixing hole (\varnothing 35 mm) of the bath
- 4) Put the **RUBBER GASKETS + WASHER + FIXING NUT** on the **FIXING DEVICE**
- 5) Put the **OR** on the **FIXING DEVICE**
- 6) Screw the **DIVERTER BODY** on the **FIXING DEVICE**
- 7) Screw the **REDUCTION** on the **DIVERTER BODY** with the **GASKETS**
- 8) Screw the **CAP G1/2** with the **GASKET G1/2** on the **DIVERTER BODY**
- 9) Connect the mixed water flexible to the **DIVERTER BODY**
- 10) Connect the **HANDSHOWER FLEXIBLE** to the **REDUCTION**