



- IT** - Collegare i cablaggi adattatore (6CABADPW99) alla nuova pompa e coprirli con l'apposito coperchio (0COPPARA00);
- GB** - Connect the adapter wiring (6CABADPW99) to the new pump and cover it with the appropriate cover (0COPPARA00);
- ES** - Conectar el cableado adaptador (6CABADPW99) a la nueva bomba y cubrirlo con la tapa (0COPPARA00);
- DE** - Die Adapterkabeln an der neuen Pumpe (6CABADPW99) anschließen und die mitgelieferte Abdeckung (0COPPARA00) auf die Elektroanschlüsse montieren.

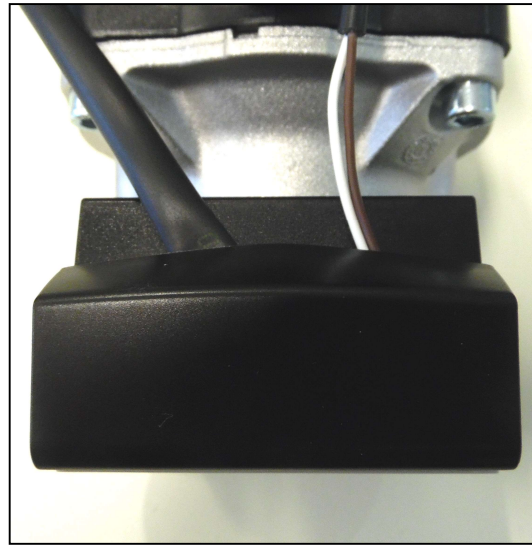

- IT** - Infine, collegare gli stessi cablaggi adattatore ai cablaggi pompa di caldaia;
- GB** - Finally, connect the adapter wiring to the boiler pump wiring;
- ES** - Finalmente, conectar el mismo cableado adaptador al cableado de la bomba de caldera;
- DE** - Gerätestecker mit den Adapterkabeln verbinden.

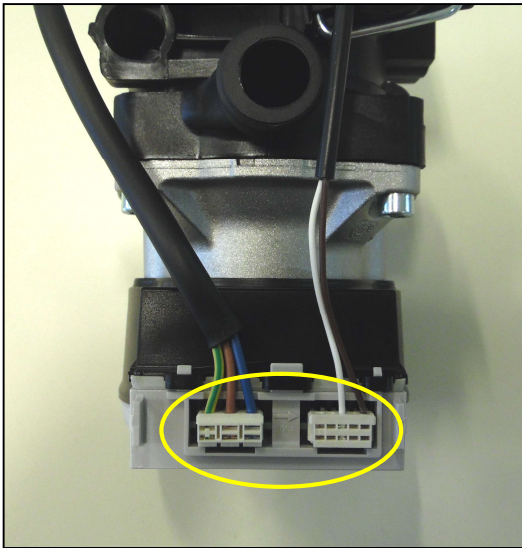